 


**IMPORTANT! KEEP THIS INSTRUCTION
MANUAL FOR FUTURE REFERENCE!**

**INSTRUCTION MANUAL FOR USE OF
KID'S TOY SCOOTER
„NEO RIDER”**

**NEO
RIDER**

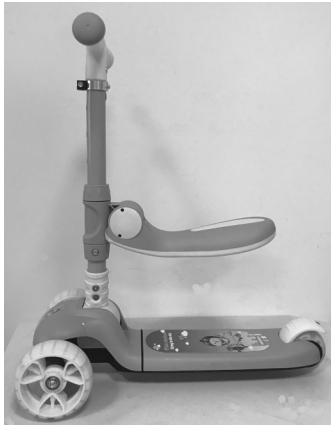

This product **chipolino** is produced in conformity with the requirements of the Toy Safety Directive 2009/48/EC of the European Parliament and the Council, national legislation and the applicable to the product European Standards.

TO GUARANTEE THE SAFE USE OF THIS PRODUCT, FOLLOW THE WARNINGS, GUIDELINES AND RECOMMENDATIONS IN THIS MANUAL:

IMPORTANT! MAIN WARNINGS!

- ❖ **CAUTION!** USE ONLY UNDER DIRECT ADULT SUPERVISION – DANGER OF FALLING!
- ❖ **CAUTION!** THE TOY IS SUITABLE FOR CHILDREN ABOVE 2 YEARS AND WEIGHT UP TO 50KG!
- ❖ **CAUTION!** DO NOT OVERLOAD! THE TOY IS NOT SUITABLE FOR CHILDREN WITH WEIGHT ABOVE 50kg.
- ❖ **CAUTION!** BEFORE USING THE TOY, TEACH THE CHILD THE CORRECT WAY TO USE IT AND THE SAFETY RULES. Using the toy requires special skills and increased caution to avoid falling and collisions.
- ❖ **CAUTION!** WEAR PROTECTIVE EQUIPMENT – helmet, knee and elbow protectors, proper shoes.
- ❖ **CAUTION!** BEFORE EACH USE, CHECK IF THE HANDLEBAR IS WELL FIXED TO THE DECK AS WELL AS IF ALL SCREWS, NUT AND BOLTS ARE WELL TIGHTENED.
- ❖ **CAUTION!** USE THE TOY ONLY DURING THE DAY ON SECURED PLAYGROUNDS AT A SAFE DISTANCE FROM STREETS AND VEHICLE ROADS.
- ❖ **CAUTION!** KEEP AWAY FROM FIRE!
- ❖ **CAUTION!** USE THE TOY ONLY FOR ITS PURPOSE.
- ❖ **CAUTION!** THIS TOY IS NOT INTENDED FOR AGGRESSIVE RIDE, TRICKS AND JUMPS!
- ❖ **ONLY** an adult should assemble or disassemble the TOY!
- ❖ **DO NOT** allow presence of children under 3 years before having assembled the TOY completely, to avoid access to small and dismantled parts!
- ❖ This TOY is intended for one child **ONLY!**
- ❖ **DO NOT** use the TOY if you find missing or damaged parts.
- ❖ **DO NOT** use the brake while turning left or right, this can cause the child to fall!
- ❖ **DO NOT** attach strings or accessories to the TOY to avoid risk of entanglement!
- ❖ **DO NOT** put items or luggage on the handlebar to avoid risk of balance disturbance!
- ❖ The child must hold the handlebar with both hands to ride safely.
- ❖ **DO NOT** put heavy items or objects on the TOY in order not to damage its construction.
- ❖ **DO NOT** use another transport means to move the TOY by hauling!
- ❖ **DO NOT** let the child using the TOY or other children close to it to touch the wheels with hands and/or put items on them!
- ❖ Use away from rivers, pools, stairs and hurdles!
- ❖ **DO NOT** make changes or modifications to the construction of the TOY! If necessary, contact the dealer or an authorized service for advice and repair.
- ❖ **DO NOT** use spare parts or other components, which are not supplied by the producer! The producer revokes all responsibility in case you have used spare parts different from the original ones or recommended by him.
- ❖ Keep the plastic bags away from children to avoid risk of suffocation!

IMPORTANT! WARNINGS AND GUIDELINES FOR BATTERY USE

- ❖ After installation of batteries, always secure the battery compartment with the cover.
- ❖ Do not allow children to access or play with the batteries!
- ❖ Use only batteries of the designated type and power.
- ❖ Do not use batteries of different types.
- ❖ Do not short circuit the contact surfaces!
- ❖ Follow the designated polarity in the battery compartment.
- ❖ Remove damaged or worn out batteries.
- ❖ Remove the batteries when the product will not be used for long time.
- ❖ Do not throw the batteries in open fire. Do not take the batteries to pieces.

CAUTION! Waste from depleted or unusable batteries must be disposed of separately. It is forbidden to throw them out in containers for household waste. Dispose of the batteries only at the specified places.

 


MAIN FEATURES


- ❖ The TOY is suitable for children above 2 years and weight up to 50kg;
- ❖ The TOY can be used as a scooter and as a ride on toy:
SCOOTER: Child grabs the handlebar, steps with one foot on the deck and pushes on the ground with the other foot;
RIDE ON TOY: Child sits on the seat, grabs the handlebar and pushes using his two feet;
- ❖ Anti-slip handlebar grips;
- ❖ Storage basket;
- ❖ Music and light on the deck;
- ❖ Rear wheel brake.

MAIN PARTS

Please make sure all parts are available:

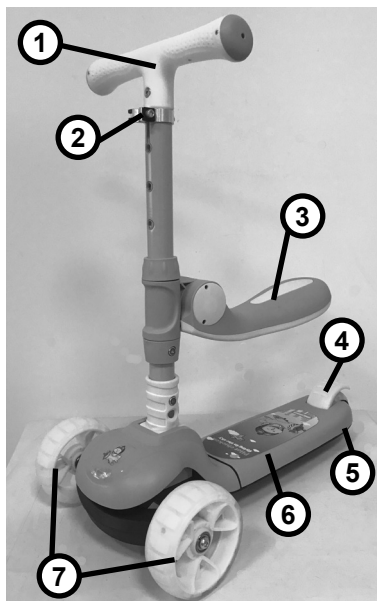

 - 1 - Handlebar
- 2 - Bracket for height adjustment
- 3 - Seat
- 4 - Brake pedal
- 5 - Rear wheel
- 6 - Deck
- 7 - Front wheels
- 8 - Storage basket

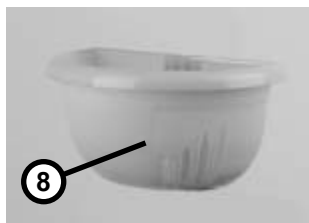

ASSEMBLY AND SAFE USE

CAUTION! FOLLOW EXACTLY THE GUIDELINES AND SEQUENCE OF ASSEMBLY AND USE GIVEN IN THE BELOW TEXT AND FIGURES.

 
CAUTION! CHECK THE SECURITY OF FIXING UPON COMPLETING EACH OPERATION!

CAUTION! THE TOY MUST BE USED WITH INCREASED CAUTION BECAUSE IT REQUIRES SKILLS TO BALANCE. IN THIS WAY YOU WILL AVOID FALLING OR COLLISIONS WHICH MAY CAUSE INJURY TO THE CHILD OR OTHER PEOPLE.

You will need a screwdriver.

UNFOLDING

Pull the T-bar about 1 cm in the arrow direction. At the same time push up the T-bar up until it is unfolded.


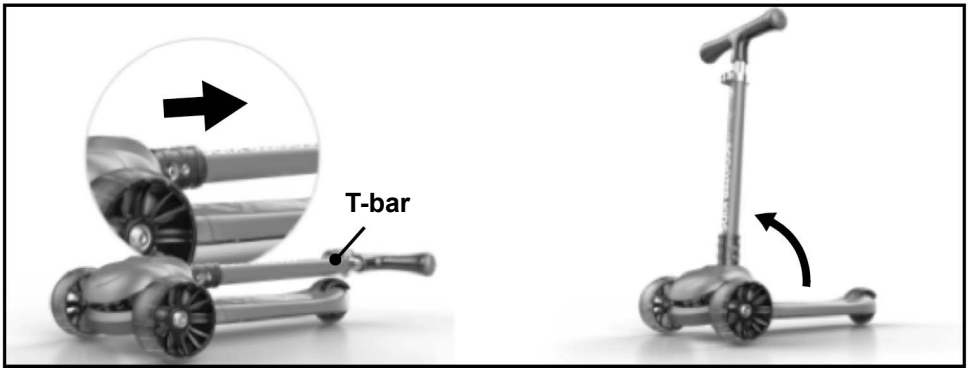


SCOOTER MOVEMENT

When you tilt the handlebar to the right, the wheels will turn **RIGHT** and the scooter will turn right.

When you tilt the handlebar to the left, wheels will turn **LEFT** and the scooter will turn left.

  
When in upright position, the scooter will move **STRAIGHT**.

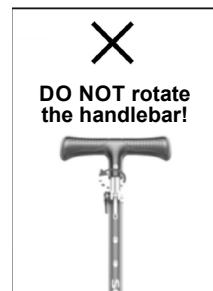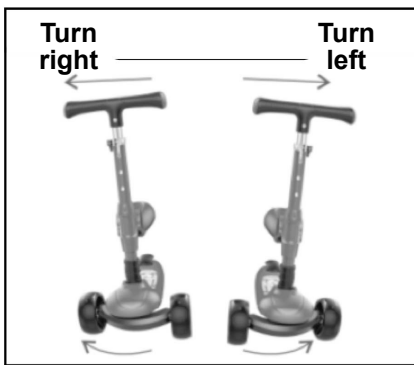

ATTENTION!

Do not rotate the handle bar when turning left or right. This may damage the handle.

 
BRAKE USAGE

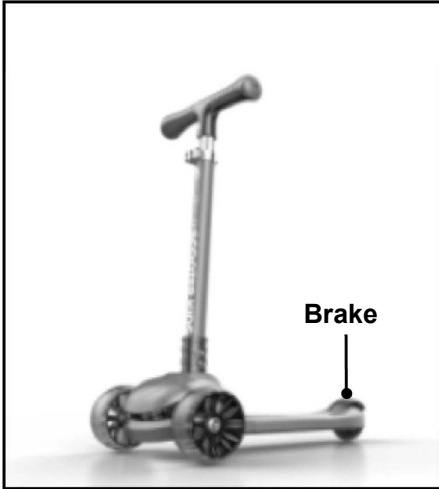

The rear wheel has a **BRAKE**. To use the brake during movement, the child can step with its heel on it and press it until the scooter stops.


CAUTION! The brake must be used with only one foot!

 ADJUSTING THE HEIGHT OF THE HANDLEBAR – 3 positions

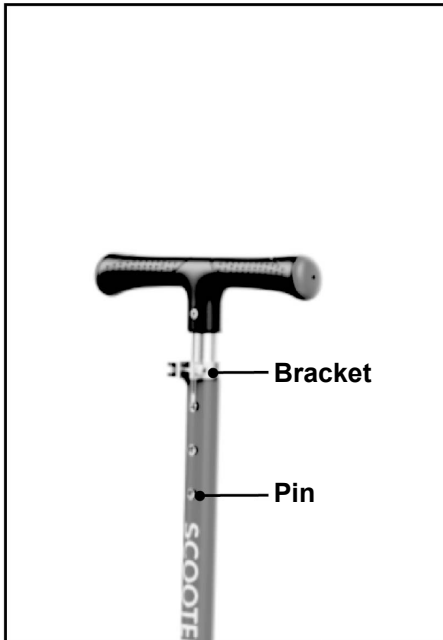


- Release the bracket, which adjusts the height of the handlebar.
- Press the pin and move the tube of the handlebar in the desired height until you hear a click and the pin shows through the respective opening.
- Tighten the bracket, which adjusts the height of the handlebar.

 SEAT USAGE

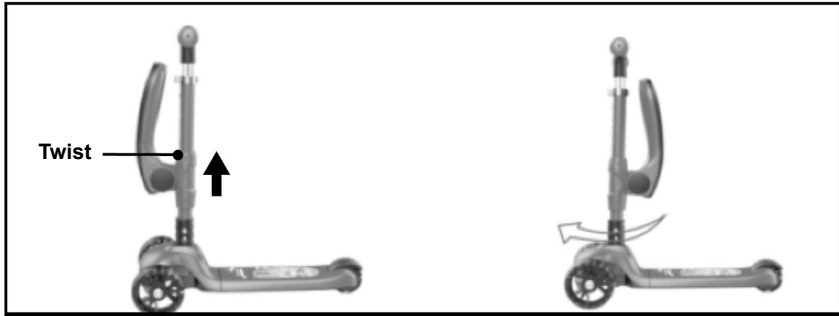

Twist the seat mechanism. Pull it up with the seat and twist it in order to position it on the other side. Release the mechanism in order to fix it.

 
STORAGE BASKET ASSEMBLY

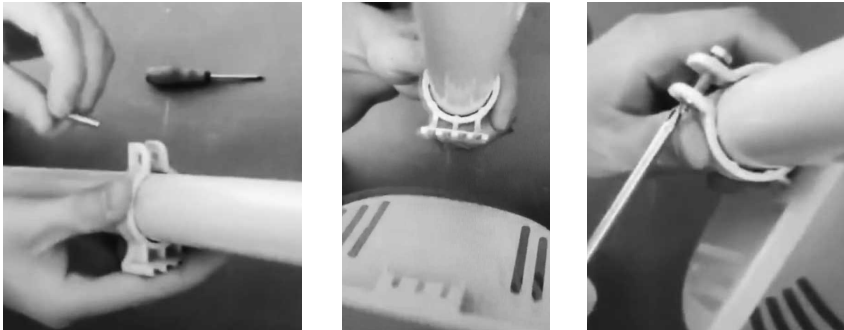

Place the storage basket bracket on the **T-bar**. Put the screw and washer. Insert the basket on the bracket and tighten the screw with screwdriver.

FUNCTIONS MUSIC AND LIGHT

 The battery compartment is located under the deck.
Unscrew the battery compartment cover with screwdriver. Remove the cover.
Place **3pcs batteries, type AAA/1,5V** by following the marked polarity.
Put back the cover and tighten the screw.

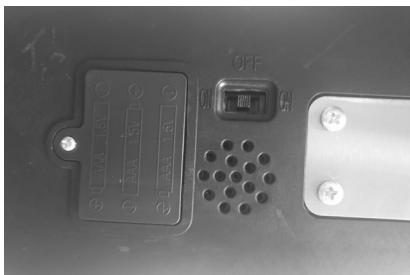

Position **OFF** – no music, no light.
Position **ON to the right** – music and light.
Position **ON to the left** – light only.

FOLDING

 
Press the **red button** and pull up the handle as shown at 1cm. Press the T-bar down until scooter is folded, as shown.



Use of helmet, knee and elbow protectors, shoes

For more safety, the child must wear a helmet on the head, knee and elbow protectors and shoes while using the toy!

The helmet must be steady on the head and not tilted back or not protecting the forehead.

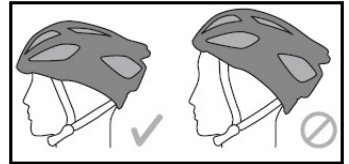

CARE AND MAINTENANCE

- ❖ Periodically check the good working order of the separate parts.
- ❖ Do not cover the TOY with liquid. Clean with soft damp towel and a neutral liquid soap.
- ❖ Do not clean with aggressive detergents containing abrasive particles, ammonia, bleach or spirit.
- ❖ Regularly oil the moving parts.
- ❖ Do not use on sandy terrains.
- ❖ Do not store the TOY in places with very warm air or close to heat sources, it will deform.
- ❖ Store the TOY in a clean and dry space. Do not subject to direct environmental influence – sun, rain, moisture or harsh temperature changes!
- ❖ Always dry the TOY or leave it to dry before storing it or using it again. Mildew may appear if you store the product damp.
- ❖ In case of problems related to the normal exploitation of the product, turn to authorized service for advice and repair.

Materials used: plastic, metal.

DSNEO021xxx / 913



CHIPOLINO LTD., 1 Goliamokonarsko Shosse Str.

www.chipolino.com