

IMPORTANT! READ CAREFULLY THIS INSTRUCTION MANUAL AND KEEP IT FOR FUTURE REFERENCE IN A SAFE PLACE, BECAUSE IT CONTAINS IMPORTANT INFORMATION FOR THIS PRODUCT AND ITS SAFE USAGE!

INSTRUCTIONS FOR USE BABY PLAY MAT

BABY PLAY MAT



This play mat with its arch with toys and lights is suitable for newborn babies and babies aged up to 1 year. It stimulates baby's senses and it has entertaining functions only.

This product is produced in conformity with the Toy safety directive of European Parliament and the Council 2009/48/EO. It is made of high quality and safe materials.

ATTENTION! FOLLOW THE GUIDELINES AND RECOMMENDATIONS IN THESE INSTRUCTIONS! PAY SPECIAL ATTENTION TO THE WARNINGS IN ORDER TO PREVENT RISK FROM INJURY OR IMPAIRMENT OF THE CHILD AND TO SECURE ITS SAFETY!

INSTRUCTIONS AND WARNINGS FOR SAFE USAGE OF THE PRODUCT

IMPORTANT! MAIN WARNINGS!

1. TO BE USED ONLY UNDER DIRECT ADULT SUPERVISION! Constant presence, control and supervision by adult is required!
2. TO AVOID RISK FROM ENTANGLEMENT, REMOVE THE TOYS WHEN THE CHILD STARTS TRYING TO RISE OR PUSH ITSELF UP ON HANDS AND KNEES! Such abilities children have when they are around 5 months and up!
3. USE ONLY AT HOME.
4. DO NOT PLACE THE PLAY MAT ON EVEN SURFACES OR SURFACES WITH SLOPE, WHEN THERE IS A BABY ON IT. PLACE THE PLAY MAT ONLY ON EVEN SURFACES AND AT A SAFE DISTANCE FROM STAIRS, SOURCES OF HEAT, WATER POOLS OR OTHER DANGEROUS PLACES WHILE THERE IS A CHILD ON IT!
5. KEEP AWAY FROM FIRE. Pay attention to risk of injuries caused by open fire and other strong sources of heat, located at the level of play mat!
6. Unpacking and assembly must be done only by an adult!
7. Do not hang on the arches any additional toys, objects or other items, strings and cords, because this can make the construction unstable and to avoid risk from entanglement, suffocation or their falling over the child.
8. Regularly check the condition of all parts, the seams of the play mat, the plush toys as well as the stability of the toy bar and toys to avoid injuries of the baby. Baby must not have any access to small parts from the filling in case there are torn stitches of the play mat or its toys. If you find any damages, stop the usage of the product until the damage is repaired.
9. Do not make repairs or other adjustments on the toys and toy bars while there is a child on the play mat!
10. The safety of this product and the materials used is confirmed by tests. Safety is guaranteed by the producer in the shape in which the product is produced and released to the market. Any modification carries serious risk of injury of the child.
11. Use the nylon package of the play mat only for its purpose – to store or transport of the play mat. It can be dangerous for children. Keep it away from children in order to avoid the risk of suffocation!


IMPORTANT! WARNINGS AND GUIDELINES FOR BATTERY USE

- ❖ After installation of batteries, always secure the battery compartment with the cover.
- ❖ Do not allow children to access or play with the batteries!
- ❖ Use only batteries of the designated type and power.
- ❖ Do not use batteries of different types.
- ❖ Do not short circuit the contact surfaces!
- ❖ Follow the designated polarity in the battery compartment.
- ❖ Remove damaged or worn out batteries.
- ❖ Remove the batteries when the product will not be used for long time.
- ❖ Do not throw the batteries in open fire. Do not take the batteries to pieces.

CAUTION! Waste from depleted or unusable batteries must be disposed of separately. It is forbidden to throw them out in containers for household waste. Dispose of the batteries only at the specified places.




ATTACHING THE TOY BARS AND TOYS

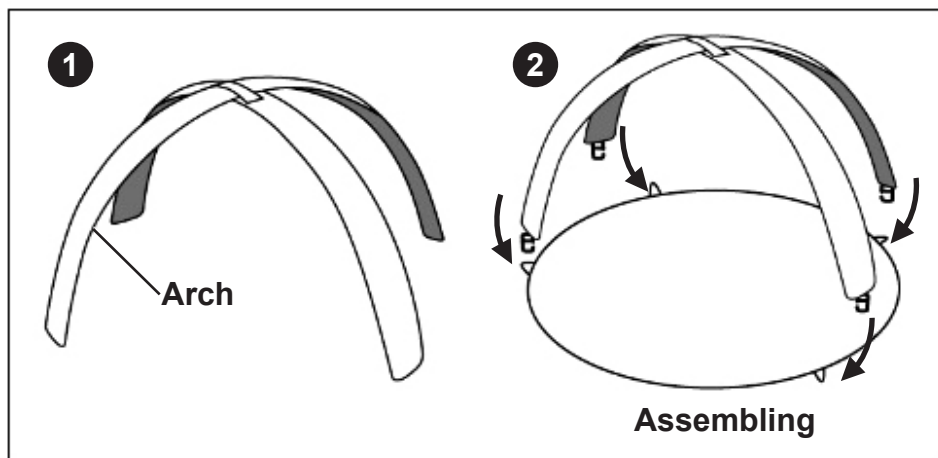

1. Join both arches.
2. Place the play mat on even surface. Join arches with the base of play mat through the buckles.

Plastic toy holders can open to easy cleaning. When you attach back the toys, holders must be well closed.

MUSICAL BOX

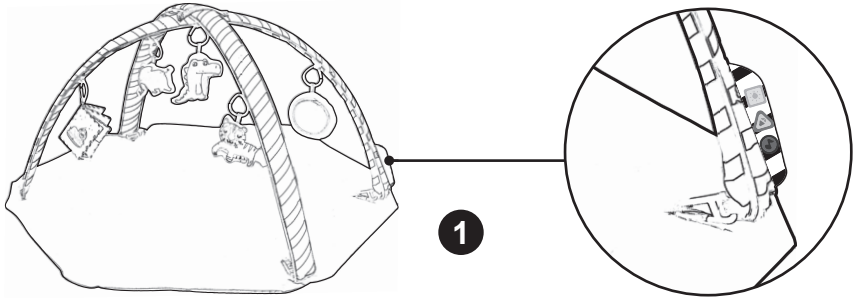

FUNCTIONS

Melodies

Volume control

Lights

Batteries:
3 pcs size
AAA/1.5V

ON/OFF

	1. Lullaby (1)	4. Merry songs (2)
	2. Lullaby (2)	5. Play all songs
	3. Merry songs (1)	

	1. Turning on the volume
	2. Turning down the volume

	1. Turning on the lights
	1. Turning off the lights

To activate the described above functions, untighten the screw on batteries compartment (located at the back of musical box) with a screwdriver and remove the cover. Place 3 pcs batteries size AAA/1.5V obeying the given polarity. Place back the cover of batteries compartment and tighten the screw to secure the batteries compartment. Join the connector of the musical box with the connector at play mat. Place the musical box in side pocket at the arch (1). To activate the functions (melodies) press the ON/OFF button.

CARE AND MAINTENANCE

If you find any broken or damaged parts of the toys and/or play mat, stop using it until it is repaired.

Do not store the product in a damp environment for a long time, close to heat sources and under the influence of direct sunlight.

Play mat is hand washable in water at 30°C and detergent suitable for baby clothes.

Make sure you rinse well the detergent before you leave them dry! Do not machine wash or tumble dry.

Toy bars and musical box can be wiped with soft cloth damped with water and mild soap.

Do not clean with aggressive detergents containing ammonia, bleach or spirit.

After cleaning and washing all parts of the product must be completely dry before using or storing.

Materials used: plastic, textile – 100% polyester.

PGRML02302FO / CC8740
PGRML02301LI / CC8741

Producer: Made in China for "CHIPOLINO" EOOD
Importer: CHIPOLINO EOOD
1 Goliamokonarsko Shosse Str, Plovdiv, BULGARIA
tel.: +359 32 600 889,

www.chipolino.com