


**IMPORTANT! READ CAREFULLY AND KEEP THIS USER'S
MANUAL IN A SAFE PLACE FOR FUTURE REFERENCE!**

**INSTRUCTION MANUAL
FOR BABY STROLLER
“ASPEN”**

ASPEN

This stroller  has been manufactured in accordance with the Product Safety Directive 2001/95/EU of the European Parliament and The Council and with European standard EN 1888-1 + A1:2022 “Child care articles. Wheeled child conveyances. Part 1: Baby strollers and carry cot”, EN 1888-2 “Child care articles. Wheeled child conveyances. Part 1: Baby strollers from 15 up to 22 kg and the regulations of national law, including Consumer Protection Law.

ATTENTION! YOUR CHILD WILL BE MOST SECURE IF YOU FOLLOW THE INSTRUCTIONS AND RECOMMENDATIONS GIVEN IN THIS USER'S MANUAL!

WARNING! INSTRUCTIONS AND WARNINGS FOR SAFETY

- ❖ CAUTION! NEVER LEAVE YOUR CHILD UNATTENDED!
- ❖ CAUTION! ALWAYS USE SAFETY BELTS, AS SOON AS THE CHILD CAN REMAIN IN A SITTING POSITION UNAIDED AND CAN PUSH HIMSELF WITH HANDS OR KNEES!
- ❖ CAUTION! MAKE SURE THAT ALL LOCKING MECHANISMS ARE ENGAGED BEFORE PLACING THE CHILD IN THE STROLLER.
- ❖ CAUTION! MAKE SURE THE CHILD IS IN SAFE PLACE AWAY FROM THE STROLLER WHEN YOU MAKE ADJUSTMENTS, FOLDING OR UNFOLDING OF THE STROLLER.
- ❖ CAUTION! DO NOT ALLOW YOUR CHILD TO USE STROLLER AS A TOY!
- ❖ CAUTION! ALWAYS CHECK IF THE ATTACHMENT DEVICES OF SEAT UNIT OR CAR SEAT ARE PROPERLY FIXED TO THE STROLLER'S FRAME BEFORE USAGE.
- ❖ CAUTION! THE STROLLER IS NOT SUITABLE FOR RUNNING OR SKATING!
- ❖ THE CARRY COT IS SUITABLE ONLY FOR A CHILD, WHO CANNOT SIT UNAIDED, ROLL OVER AND CANNOT PUSH ITSELF ON ITS HANDS AND KNEES! MAXIMUM WEIGHT OF HE CHILD: 9 kg!
- ❖ USE THE POSITION FOR SITTING AFTER YOUR CHILD TURNS 6 MONTHS!
- ❖ KEEP AWAY FROM FIRE!
- ❖ DO NOT LIFT THE STROLLER BY THE FRONT BAR, BECAUSE THIS CAN LEAD TO SERIOUS INJURIES!
- ❖ DO NOT ADJUST OR SET THE BACKREST POSITION WHEN SEAT UNIT IS IN CARRY COT MODE!
- ❖ Use the stroller for a child weighing not more than 22 kg.
- ❖ Initial assembly, folding and unfolding to be done only by adult!
- ❖ Do not put in carry cot additional mattress, thicker than 10 mm!
- ❖ Always engage the parking devices when the stroller has stopped and is not moving, especially when you place or take out your child from it!
- ❖ Make sure the safety belts are fastened and fit well to the child before usage.
- ❖ The maximum load for the storage basket is 2 kg.
- ❖ The maximum load for the accessories bag (in case there is one) is 2 kg.
- ❖ Do not overload the stroller! Always balance your stroller in a way to keep it stable and prevent the risk of tip-over!
- ❖ This stroller is intended for use for one child at a time!
- ❖ Do not use any spare parts or other components, which are not approved by the producer! The producer does not take any responsibility for the safety of the child when you have not used the proper and original spare parts, approved and provided by him!
- ❖ Do not apply any changes or modifications to the stroller's construction! Contact the dealer or an authorized repair service for advice and/or repair instead!
- ❖ Discontinue the usage, if you find worn out or loose joints, damaged or missing parts! There is a risk of injury of the child!
- ❖ Do not allow children younger than 3 years near the stroller during the assembly or disassembly, in order to prevent the risk of injury or swallowing of small parts!
- ❖ Strings can cause strangulation! Do not place additional strings to the product to avoid injuries!

- ❖ Never use the stroller on stairs or escalators! Use extra care when going up or down a pavement or step!
- ❖ The packaging of the product must be kept out of the reach of children to avoid the risk of strangulation!




MAIN FEATURES

- ❖ Stroller is suitable for newborn babies and children aged up to 4 years and weighing up to 22 kg (whichever comes first);
- ❖ The seat transforms into a carry cot that can be used for children aged less than 6 months and weighting not more than 9 kg.;
- ❖ Car seat “ASPEN”, Group 0+ (0-13 kg). It is safe and compatible with stroller’s frame;

Note: Car seat is sold separately. All instructions and recommendations for safety usage and installation are given in separate user’s manual;


- ❖ Seat unit can be installed in 2 modes – mother facing mode and motion facing mode;
- ❖ 5-point safety harness system;
- ❖ Adjustable seat – 3 positions;
- ❖ Adjustable backrest;
- ❖ Adjustable canopy;
- ❖ Swiveling and straight direction of front wheels.

MAIN PARTS

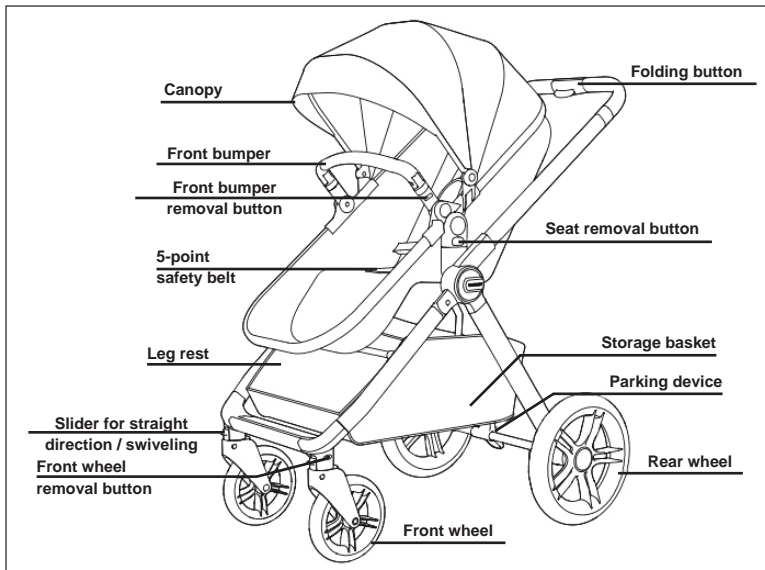


ATTENTION! Before assembly please make sure that all parts are available.

Each packing contains:

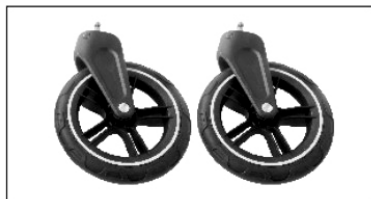

Front wheel – 2 pcs

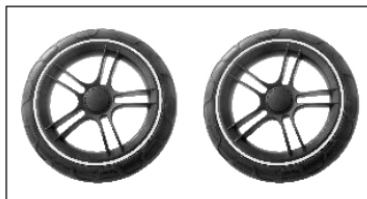

Rear wheel – 2 pcs



Frame – 1 pc



Seat unit – 1 pc

ASSEMBLY INSTRUCTION AND FUNCTIONS

This stroller is supplied partially assembled. In order to complete the assembly, you don't need any tools.

ATTENTION! Follow exactly the instructions given and check the pictures.

ATTENTION! After each operation, make sure that you have followed the instructions correctly and the fixing is stable.

ATTENTION! Properly fixing is often accompanied with click sound.

Assembly and functions are given in figures 1-17. Use all descriptions below together with figures with the same number.

ASSEMBLY

1 – OPEN THE FRAME

1-1 – Release the fixing.

1-2 – Grab the handle and pull upwards until stroller opens and you hear a click sound.

2 – INSERT AND REMOVE OF FRONT WHEELS

2-1 – Insert the axis of front wheel into the hub at frame and press. You must hear a click. Make sure that wheel is securely fixed to frame, as trying to pull it out.

2-2 – To remove the front wheel, press the button for removal and pull the wheel downwards.

3 – INSERT AND REMOVE OF REAR WHEELS

3-1 – Insert the axis of rear wheel into the hub at frame and press. When wheel fixes you will hear a click sound. Make sure that wheel is securely fixed to frame, as trying to pull it out.

3-2 – To remove the rear wheel, pull the lever downwards and take the wheel out of the frame.

4 – INSTALLATION AND REMOVAL OF SEAT

Place the seat to the frame and press. When seat fixes you will hear a click sound.

ATTENTION! Make sure that seat is securely fixed to frame, as trying to pull it out.

Seat removal: To remove the seat, press the buttons simultaneously at both sides of the seat and remove the seat from the frame (for removal button see MAIN PARTS DIAGRAM).

5 – INSERT AND REMOVE OF FRONT BUMPER BAR

Place the bumper to the slots of the frame and press. When bumper fixes you will hear a click sound. Make sure that bumper is securely fixed to frame, as trying to pull it out.

To remove the bumper, press the buttons at both sides of the bumper and pull it from the frame.

FUNCTIONS

6 – SEAT FOLDING AND UNFOLDING

6-1 – Grab the seat with your hand and unfold it You must hear a click sound by fixing.

6-2 – Press simultaneously the buttons at both sides of seat frame and fold the seat.

7 – SWIVELING AND STRAIGHT DIRECTION OF FRONT WHEELS

Press the lever downwards to activate the straight direction of front wheels.

Pull the lever upwards to activate the swiveling of front wheels.

ATTENTION! When using the stroller on uneven terrains, set the front wheels in straight direction only.

8 – PARKING DEVICE

To activate the parking device press the lever downwards.

ATTENTION! Apply the parking devices always when stroller is not in motion to avoid risk of stroller sliding.

9 – SEAT ADJUSTMENT

Seat can be adjusted in 3 positions.

Press simultaneously the buttons for seat adjustment at both sides of frame and set the seat in required position. By fixing you must hear a click sound.

10 – BACKREST ADJUSTMENT

Press the mechanism for backrest adjustment and move it up or down until you reach the required position.

11 – CANOPY ADJUSTMENT

Folding: Push the canopy with your hand to close it.

Unfolding: Pull the canopy with your hand to open it.











ATTENTION! Always attach the canopy to the seat to avoid sliding of child and injuries!








12 – SEAT DIRECTION – 2 POSITIONS


Seat can be installed on frame of stroller in 2 positions – child is facing the motion of stroller and child is facing the parent, who pushes the stroller (position that is opposite to the direction of motion).

12-1 – Press simultaneously the buttons for seat removal at both sides of frame and pull it up.

12-2 – Rotate the seat at 180 degrees to change the seat direction, place it again back to the frame and press until you hear a click sound.

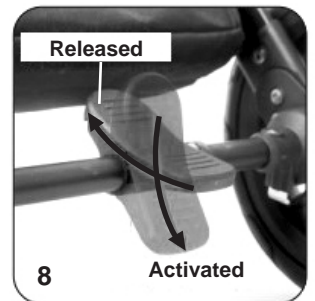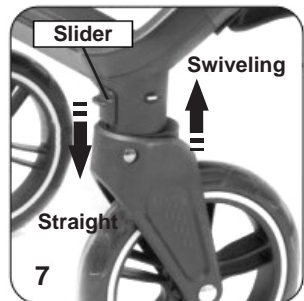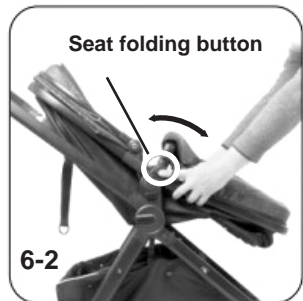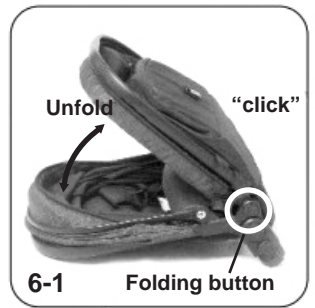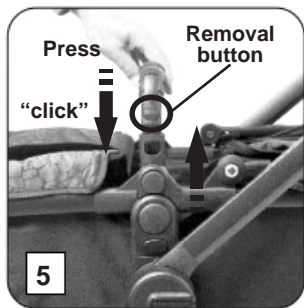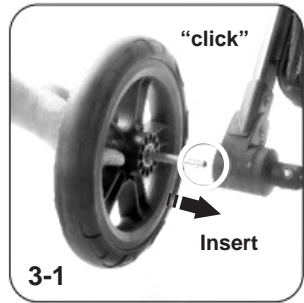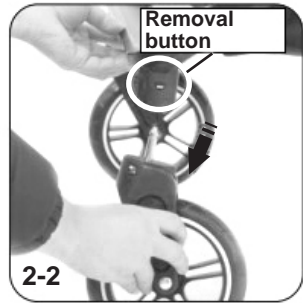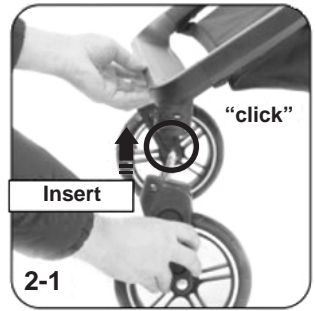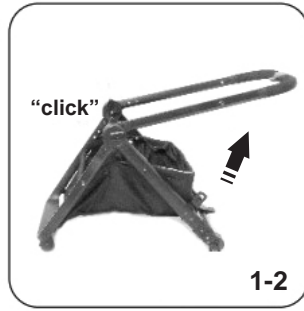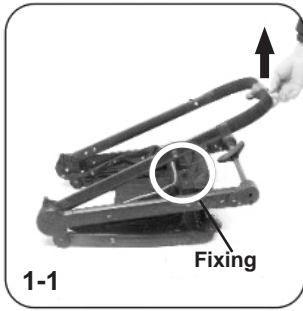

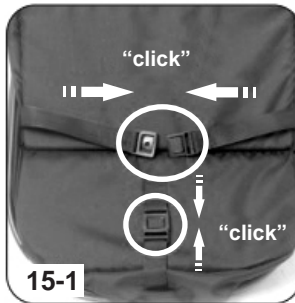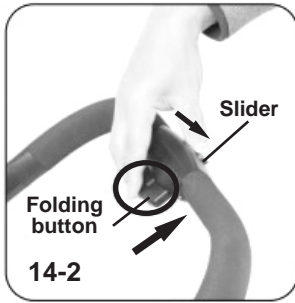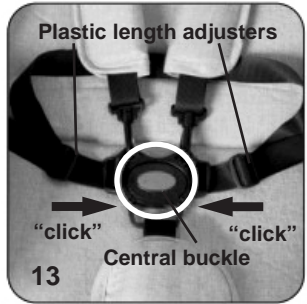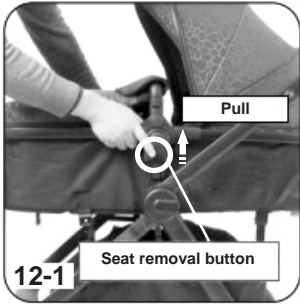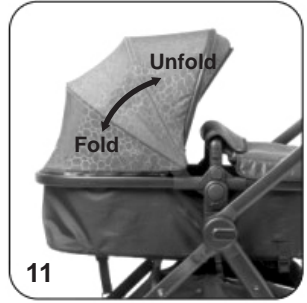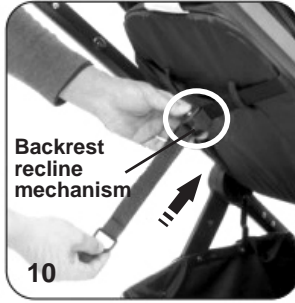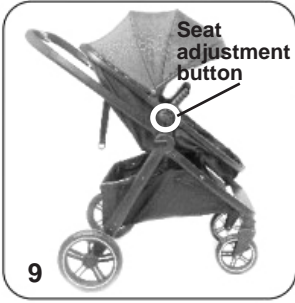

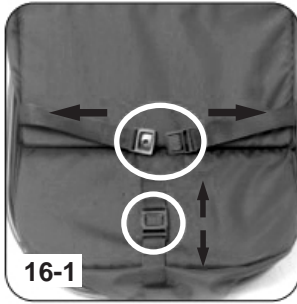

CARE AND MAINTENANCE

- ❖ The brakes and wheels wear out faster than other parts. Replace them when necessary.
- ❖ Regularly oil the moving parts. Use silicone oil or silicone spray for oiling.
- ❖ Dirt could make difficult the function of your stroller. Clean and oil all dirty metal and plastic parts regularly.
- ❖ Clean the fabrics, plastic parts and metal parts with damp cotton cloth or sponge and mild soap.
- ❖ Do not use abrasive, bleach or other aggressive detergents.
- ❖ Always after cleaning leave the stroller fully dry and after that use it or store it. It may appear mold to your stroller if you keep it moist.
- ❖ Always store your stroller indoors. The effect of the environment – sea air, road covered with salt, acid rains, etc., as well as storing in the open air lead to corrosion.
- ❖ Please, contact your authorized dealer for problems connected with the use or repair of this stroller.

Fabric Composition:

Outer: 100% polyester

Filling: 100% polyester



Used materials: plastics, textile, metal.

KKAS023xxxx

CHIPOLINO

1 Goliamokonarsko shosse, Plovdiv, BULGARIA

www.chipolino.com