

PLEASE, READ THIS INSTRUCTION MANUAL CAREFULLY BEFORE USING THIS TOY AND KEEP IT FOR FUTURE REFERENCE IN A SAFE PLACE, BECAUSE IT CONTAINS IMPORTANT INFORMATION, INSTRUCTIONS AND RECOMMENDATIONS FOR THIS TOY AND ITS SAFE USAGE!

INSTRUCTIONS FOR USE OF MUSICAL MOBILE FOR BED WITH PROJECTOR



This toy with **chipolino** brand is intended to stimulate senses of newborn and very young babies (0+) and it has only entertaining functions – with different melodies, lights, projector and rotation of hanging plush toys. This toy is not meant for play or to be touched by the baby. It can be attached to baby cot.

This toy has been manufactured with compliance with Directive 2009/48/EO of the European parliament and the Council regarding safety of toys. It is made of high quality and safe materials.

CAUTION! Follow instructions and recommendations in this user's manual. Pay special attention to warnings to avoid risk of injuries of the child and to assure child's safety!

ATTENTION! INSTRUCTIONS AND WARNINGS FOR SAFE USAGE

1. **ATTENTION!** TO BE USED ONLY UNDER ADULT SUPERVISION!
2. **ATTENTION!** TO AVOID ENTANGLEMENT, REMOVE THIS TOY WHEN BABY STARTS PUSHING ITSELF UP ON HANDS OR KNEES IN CRAWLING POSITION! SUCH SKILLS CHILDREN ACQUIRE WHEN THEY ARE AGED AROUND 5 MONTHS OR UP!
3. **ATTENTION!** MOUNT THE TOY ON SAFE DISTANCE SO, THAT BABY CAN'T REACH IT WITH HANDS! DO NOT ATTACH IT OVER BABY'S HEAD. DO NOT ATTACH IT ON PLAYPENS. TO BE ATTACHED ONLY BY ADULT!
4. **ATTENTION!** ALWAYS REMOVE THE TOY WHEN YOU TRANSPORT OR FOLD THE CRIB.
5. **ATTENTION!** KEEP THIS TOY AWAY FROM FIRE. DO NOT STORE THIS TOY FOR LONG PERIODS OF TIME NEAR SOURCES OF HEAT OR UNDER DIRECT SUNLIGHT TO AVOID DEFORMATIONS.
6. **ATTENTION!** DO NOT ATTACH IT OVER BABY'S HEAD. DO NOT INSTALL THE TOY ON PLAYPENS!
7. **ATTENTION!** THIS TOY HAS ONLY ENTERTAINING FUNCTIONS AND IS NOT FOR PLAY!
It is intended to entertain newborn babies or very young children – with gentle melody and spinning toys. Do not allow baby touch it or other children play with it when the toy is mounted on the crib!
8. Unpacking, assembly, mounting and fixing of parts to be done only by an adult according to given figures. Before using this toy always make sure you followed the given instructions in this manual and the toy is securely fixed to the bed! The toy must be fully assembled before usage!
9. This toy is intended for domestic use only!
10. Do not place other additional toys, objects or cords over this toy, because you will make it unstable and to avoid risk of entanglement, suffocation or falling over the child.
11. Do not make any settings, mount or dismount of the toy while there is a child in the crib!
12. Regularly check all parts of the toy – stitches of plush toys and stability of fixing to avoid injuries. Tighten the mechanism if needed. There must not be damaged, worn out parts, loose connections or splits on the frame. Discontinue and dismount the toy from the bed in case you find any damages. Remove the fault and only then you can continue using the toy.
13. The safety of this product and the materials used is confirmed by tests. Safety is guaranteed by the producer in the shape in which the product is produced and released to the market. Any modification carries serious risk of injury of the child!

 
 
IMPORTANT! WARNINGS AND GUIDELINES FOR BATTERY USE

- ❖ After installation of batteries, always secure the battery compartment with the cover.
- ❖ Do not allow children to access or play with the batteries!
- ❖ Use only batteries of the designated type and power.
- ❖ Do not use batteries of different types.
- ❖ Do not short circuit the contact surfaces!
- ❖ Follow the designated polarity in the battery compartment.
- ❖ Remove damaged or worn out batteries.
- ❖ Remove the batteries when the product will not be used for long time.
- ❖ Do not throw the batteries in open fire. Do not take the batteries to pieces.

CAUTION! Waste from depleted or unusable batteries must be disposed of separately. It is forbidden to throw them out in containers for household waste. Dispose of the batteries only at the specified places.



ASSEMBLY AND FUNCTIONS

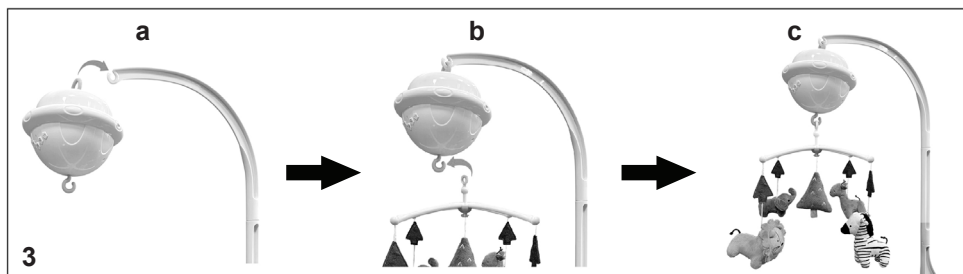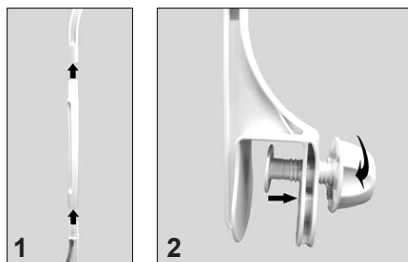

STAND ASSEMBLY

1. Position one to each other the base and holders of stand, as shown in the figure.
2. Untighten the mechanism at the bottom and place the stand to baby's crib. Tighten the mechanism until the stand fixes.

IMPORTANT! Make sure that you fixed the stand to the baby's crib.

MUSICAL BOX/PROJECTOR

Attach the musical box onto the hook of stand (fig3a).

 
Attach the module with toys onto the hook of musical box (fig3b).






Musical mobile for bed is assembled (fig. 3c).

Note! Before using the function of toy, make sure that there are installed batteries in the musical box.

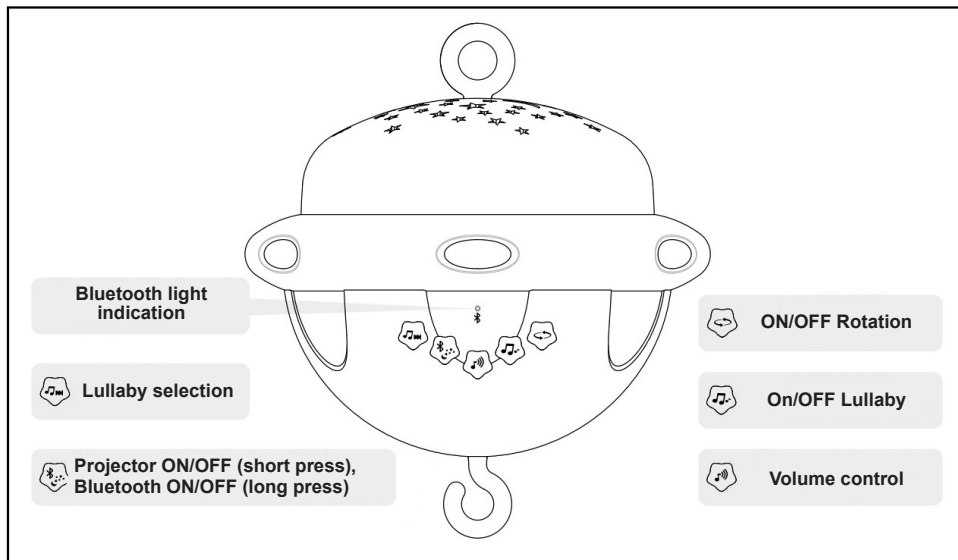
FUNCTIONS

Functions: Bluetooth, melodies, projector, rotation of toys.



	<p>Lullaby selection Press the button once for next lullaby. This button is active only if the lullaby function is ON.</p>
	<p>Projector – it turns on by short press of button Bluetooth – it turns on by long press of button</p>
	<p>Volume control – 5 levels. Press the button to set the volume up. The volume is set in middle level by the producer.</p>
	<p>On/OFF for lullaby Press the button to turn on or off the lullaby</p>
	<p>On/OFF for rotation Press the button to turn on or off the rotation</p>

 To use the functions of toy, you have to install batteries:

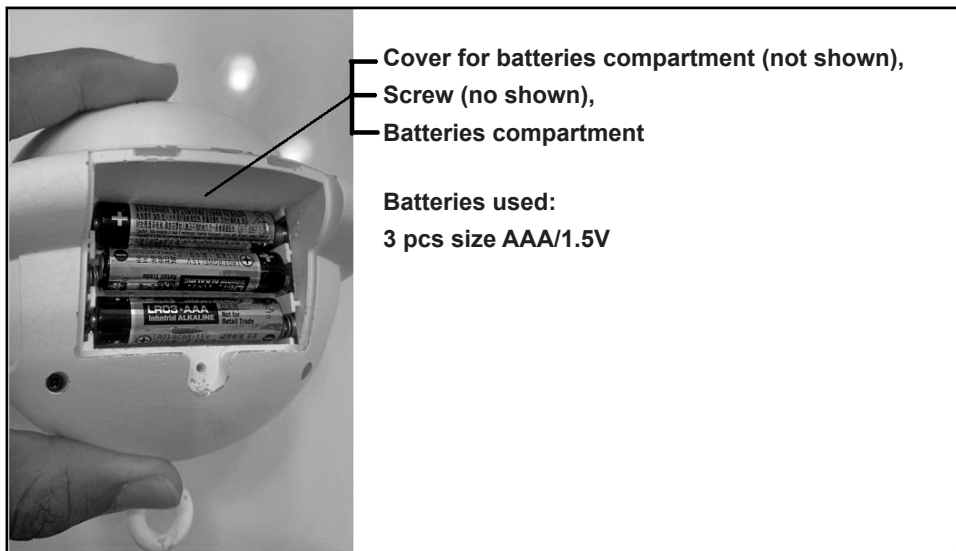

1. Untighten the screw at the cover of batteries compartment with a screwdriver and remove the cover.
2. Install 3 pcs batteries, size AAA/1,5V by obeying the given polarity.

Note: Batteries are not included in the set.

3. Place back the cover and tighten the screw to secure the batteries compartment.

CARE AND MAINTANENCE

1. When you find loosen connections, broken or damaged parts of the toy, repair the damage and only then use the toy by its purpose.
2. Do not store the toy for long period of time in wet environment near sources of heat or under direct sunlight.
3. Do not use abrasive detergents, bleach, acetone, ammonia, alcohol or other aggressive detergents for cleaning.
4. Plush toys are washable by hand in warm water and with mild detergent for babies' clothes. Do not wash toys in washing machine! Make you have rinsed the toys very well before let them dry!

Materials used: plastic, textile.

MILD023xxxxx/ LR-EM01P

CHIPOLINO

1 Goliamokonarsko Shosse Str, Plovdiv, BULGARIA, tel.: +359 32 600 889,

www.chipolino.com