

IMPORTANT! KEEP THIS MANUAL FOR FUTURE REFERENCE!

INSTRUCTION MANUAL FOR USE OF BABY STROLLER “MILEY”

MILEY



This stroller **chipolino** is manufactured according to the requirements of the Product Safety Directive 2001/95/EU of the European Parliament and The Council and with European standard EN 1888-1:2018 Child use and care articles. Wheeled child conveyances. Part 1: Pushchairs and prams, as well as the National Consumer Protection Law and national legislation.

FOLLOW ALL WARNINGS, INSTRUCTIONS AND RECCOMENDATIONS IN THIS MANUAL IN ORDER TO GUARANTEE THE SAFE USE OF THIS PRODUCT:

IMPORTANT! WARNINGS!


- ❖ **CAUTION!** NEVER LEAVE YOUR CHILD UNATTENDED!
- ❖ **CAUTION!** THE SEAT OF THIS STROLLER IS NOT SUITABLE FOR BABIES YOUNGER THAN 6 MONTHS!
- ❖ **CAUTION!** ALWAYS USE THE SAFETY BELT!
- ❖ **CAUTION!** IN ORDER TO AVOID INJURY, MAKE SURE CHILDREN ARE AT SAFE DISTANCE FROM THE STROLLER DURING ITS ADJUSTING, UNFOLDING OR FOLDING!
- ❖ **CAUTION!** MAKE SURE ALL PARKING DEVICES ARE ENGAGED BEFORE USE.
- ❖ **CAUTION!** DO NOT ALLOW YOUR CHILDREN TO PLAY WITH THE STROLLER!
- ❖ **CAUTION!** THIS PRODUCT IS NOT SUITABLE FOR RUNNING OR SKATING
- ❖ KEEP AWAY FROM FIRE!
- ❖ DO NOT LIFT THE STROLLER BY ITS FRONT BUMPER!
- ❖ To be used for a child with weight up to 15 kg.
- ❖ Adult assembly is required!
- ❖ Always activate the parking device when you put the children in or out of the stroller!
- ❖ Make sure the safety belts are correctly fastened and adjusted before each use.
- ❖ The maximum load for the storage basket is 2 kg!
- ❖ The maximum load of a diaper bag (in case you are using one) should not exceed 2 kg!
- ❖ Do not overload the stroller! Every load attached to the handle, bumper, and backrest or on the side of the stroller will affect its stability!
- ❖ To be used for one child only at a time. Do not place two or more children in the stroller!
- ❖ Only use spare parts or other components, which are recommended or supplied by the producer! In the contrary case the producer is not responsible for the product's safety.
- ❖ Do not make any changes or modifications to the stroller's construction! In case of problems contact the dealer or an authorized repair service for advice and/or repair.
- ❖ Do not use this stroller if you find missing or damaged parts!
- ❖ Do not allow children younger than 3 years near the stroller during its assembly!
- ❖ Do not attach any strings or long cords to the stroller in order to avoid risk of suffocation!
- ❖ Do not use the stroller on stairs or escalators and pay attention when overcoming a curb or a step.
- ❖ Keep the plastic packaging away from children in order to avoid risk of suffocation!



PRODUCT FEATURES

- ❖ This stroller is intended for one child aged 6-36 months and weighing up to 15 kg;
- ❖ 5-point safety harness;
- ❖ Adjustable backrest;
- ❖ Adjustable canopy;
- ❖ Adjustable leg rest;

MAIN PARTS

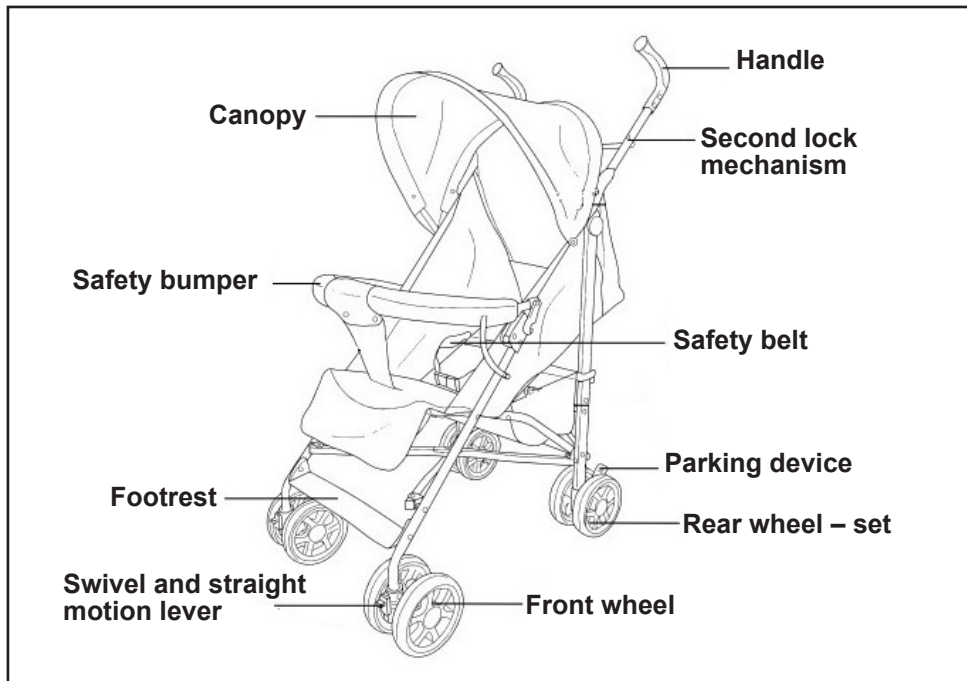

ASSEMBLY INSTRUCTIONS AND FUNCTIONS

This stroller is supplied partially assembled. In order to complete the assembly, you don't need any tools. **IMPORTANT!** Follow exactly the instructions given and check the pictures. Keep your hands from entrapment!

IMPORTANT! After each operation, make sure that you have followed the instructions correctly and the fixing is stable!

IMPORTANT! In most cases after the completion of an operation you will hear a clicking sound.

The assembly, disassembly and functions are numbered from 1 to 10. Use the operations descriptions given in this manual and their matching picture.

1 – OPEN THE STROLLER

1a – Release the hook.

1b – Grab the handles with your hands, lift the stroller and press the locking mechanism with your foot until it is fixed and you hear a click.

1c – Press the second locking mechanism.

2 – INSTALLATION AND REMOVAL OF FRONT WHEELS

To remove each wheel, press the lever and the remove the wheel.

3 – INSTALLATION AND REMOVAL OF REAR WHEELS

ATTENTION! After you install the wheels make sure the pin is showing through the opening!

In order to remove the wheels, press the pins and take out the wheels.

4 – SWIVEL AND STRAIGHT MOVMENT OF FRONT WHEELS

Note: When using the stroller on uneven surfaces, fix the wheels for straight movement only.

5 – PARKING DEVICE

ATTENTION! Always activate the parking device when the stroller is not moving – this way you will prevent unwanted sliding or slipping of the stroller!

6 – CANOPY

Pull or push the canopy in order to adjust it.

ATTENTION! Always attach the canopy to the stroller backrest to prevent the baby from sliding and falling of the stroller.

7 – BACKREST ADJUSTMENT

7 (1) – Pres the button on the backrest adjusting belt;

7 (2) – Move the mechanism:

- Up – in order to fix the backrest in sitting position;
- Down – in order to fix the backrest in lower position.

8 – RESTRAINT SYSTEM (SAFETY BELT)

Press the central button in order to unfasten the belt.

Adjust the belts length by moving the plastic sliders as shown in the figure.

Note: Belt must be snug to child's body and must not be twisted.

CAUTION! Periodically check to ensure that the seat belt is securely attached to the stroller frame as well as securely fastened.

9 – LEG REST

Press the two levers simultaneously and move the leg rest down. If you want to position the leg rest up, just push it up with your hand until you hear a click.





10 – FOLDING THE STROLLER






IMPORTANT! Before folding the stroller, activate the parking device and empty the storage basket.

10 a – Fold the canopy, nplace the backrest in sitting position and move up the locking mechanism;

10 b – Lift up the second lock and press the handles until stroller is fully folded;

10 c – Fasten the hook.

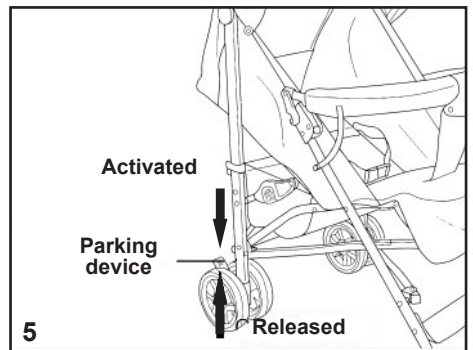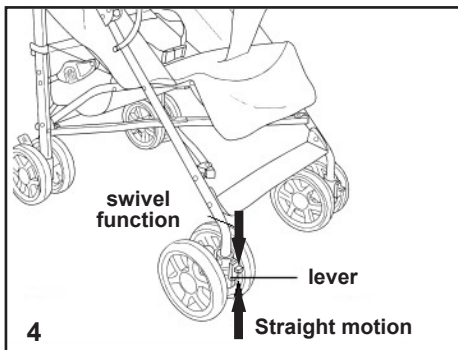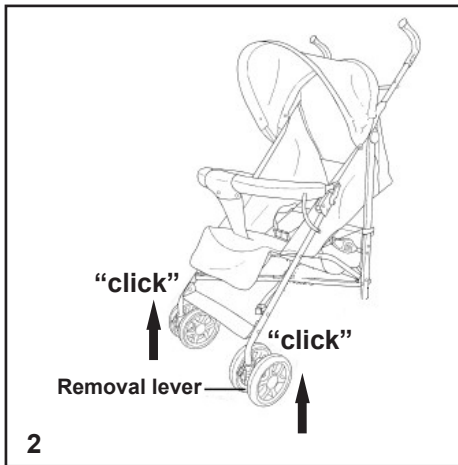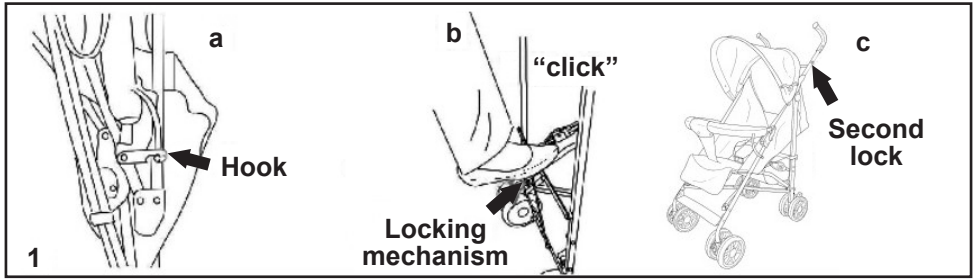

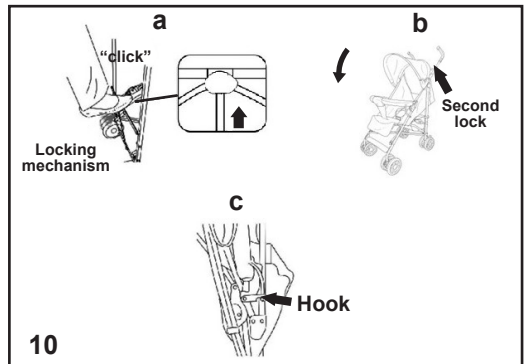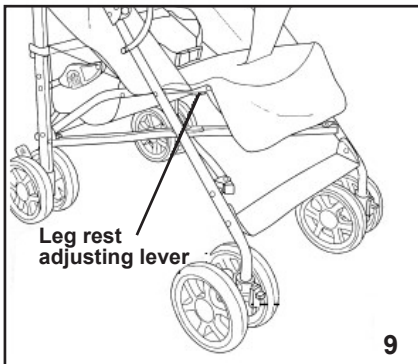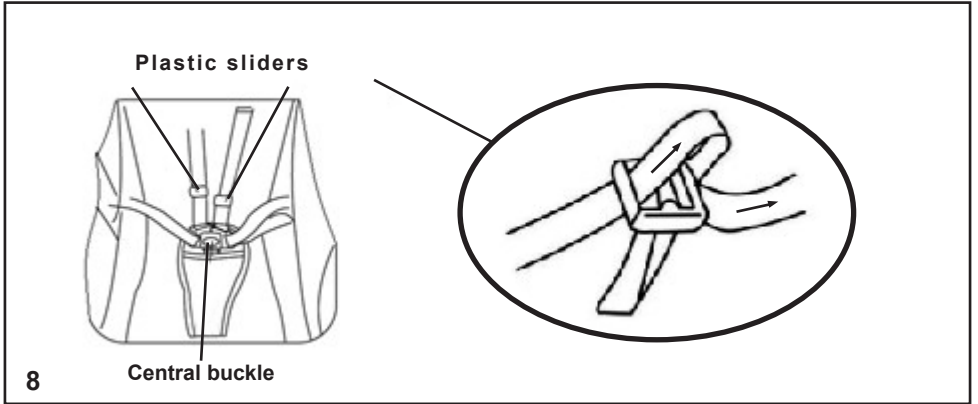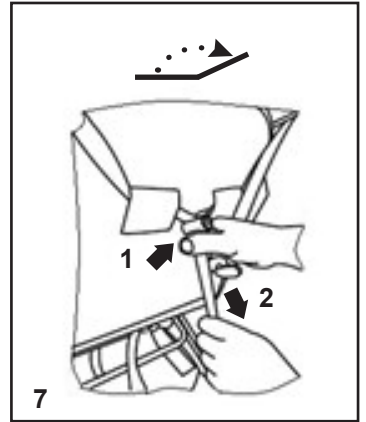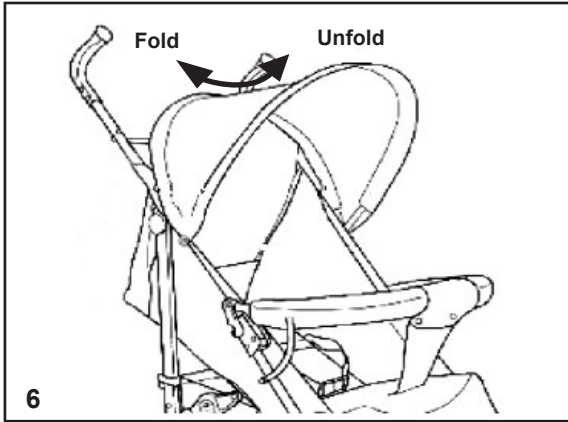

CARE AND MAINTENANCE GUIDELINES

- ❖ The brakes and wheels wear out faster than other parts. Replace them when necessary.
- ❖ Regularly oil the moving parts. Use silicone oil or silicone spray for oiling.
- ❖ Clean and oil all dirty metal and plastic parts regularly.
- ❖ Clean the fabrics, plastic parts and metal parts with damp cotton cloth or sponge and mild soap.
- ❖ Do not use aggressive detergents, solvents, bleach or spirits to clean your stroller.
- ❖ Always leave the stroller to fully dry after cleaning before you use it or store it. Mold could form if you keep your stroller moist.
- ❖ Always store your stroller indoors in clean and dry place. Do not expose to direct environment influence - sun, rain, moisture and high temperature intervals.
- ❖ Please, contact your authorized dealer for problems connected with the use or repair of this stroller.

Fabric Composition:

Outer: 100% Polyester

Filling: 100% Polyester



LKMIL022xxx



Bulgaria, Plovdiv, str. Golyamokonarskoshosse 1

www.chipolino.com